

U700 SMART

THE CHOICE OF LANGUAGE IS LIMITED AND DIFFERS BETWEEN ALEXA AND GOOGLE. ALL VOICE COMMANDS LISTED ARE EXAMPLES. SIMILAR, SLIGHTLY MODIFIED SENTENCES MAY ALSO WORK.



OPERATING MODE	
EN	"SET THE <DEVICE NAME> <RANGE NAME> TO <VALUE>"
US	"SET THE <RANGE NAME> ON THE <DEVICE NAME> TO MAXIMUM" "DECREASE THE <RANGE NAME> ON THE <DEVICE NAME> BY <VALUE>" "WHAT'S THE <DEVICE NAME> <RANGE NAME>?" "TURN UP THE <DEVICE NAME> <RANGE NAME>"
IT	"IMPOSTA LA <RANGE NAME> SU 7" "IMPOSTA AL MASSIMO LA <RANGE NAME> DELLA CAMERA DA LETTO." "AUMENTA LA <RANGE NAME> DELLA CAMERA DA LETTO." "RIDUCI DI <VALUE> LA <RANGE NAME> DELLA CAMERA DA LETTO." "QUAL È LA <RANGE NAME> DELLA CAMERA DA LETTO?"
JP	"<DEVICE NAME>の<RANGE NAME>を<VALUE>にして" "<DEVICE NAME>の<RANGE NAME>を最大にして" "<DEVICE NAME>の<RANGE NAME>を上げて" "<DEVICE NAME>の<RANGE NAME>を<VALUE>弱めて" "<DEVICE NAME>の<RANGE NAME>は?"
DE	"STELLE DIE <RANGE NAME> AUF <VALUE>" "STELLE DIE <RANGE NAME> AUF MAXIMUM" "ERHÖHE DIE <RANGE NAME> DES <DEVICE NAME>" "VERRINGERE DIE <RANGE NAME> AUF <DEVICE NAME> UM <VALUE>" "WAS IST DIE <RANGE NAME> AUF <DEVICE NAME>?"
ES	"PON LA <RANGE NAME> DEL <DEVICE NAME> DEL <ROOM NAME> EN <VALUE>." "PON LA <RANGE NAME> DEL <DEVICE NAME> DEL <ROOM NAME> AL <VALUE>." "SUBE LA <RANGE NAME> DEL <DEVICE NAME> DEL <ROOM NAME>." "REDUCE LA <RANGE NAME> DEL <DEVICE NAME> DEL <ROOM NAME> EN <VALUE>." "REDUCE LA <RANGE NAME> DEL <DEVICE NAME> DEL <ROOM NAME> A <VALUE>." "¿CUÁL ES LA <RANGE NAME> DEL <DEVICE NAME> DEL <ROOM NAME>?"
PT	"MUDE A <RANGE NAME> DO QUARTO PARA <VALUE>" "COLOQUE A <RANGE NAME> DO QUARTO AO MÁXIMO" "AUMENTE A <RANGE NAME> DO QUARTO" "DIMINUA A <RANGE NAME> DO QUARTO EM <VALUE>" "QUAL É A <RANGE NAME> DO QUARTO?"
FR	"RÈGLE LA <RANGE NAME> DU <DEVICE NAME> DE LA <ROOM NAME> À <VALUE>" "RÈGLE LA <RANGE NAME> DU <DEVICE NAME> DE LA <ROOM NAME> AU <VALUE>." "AUGMENTE LA <RANGE NAME> DU <DEVICE NAME> DE LA <ROOM NAME>." "DIMINUE LA <RANGE NAME> DU <DEVICE NAME> DE LA <ROOM NAME> DE <VALUE>." "QUELLE EST LA <RANGE NAME> DU <DEVICE NAME> DE LA <ROOM NAME>?"

POWER SWITCH / ON OFF	
EN	"TURN ON THE <DEVICES NAME>."
US	"TURN OFF THE <DEVICE NAME>."
IT	"ACCENDI L'<DEVICE NAME>." "SPEGNI LE <DEVICE NAME>."
JP	"<DEVICE NAME> をつけて" "<DEVICE NAME> を消して"
DE	"<DEVICE NAME> EINSCHALTEN." "SCHALTE DAS <DEVICE NAME> AUS."
ES	"ENCIENDE LA <DEVICE NAME>." "APAGA LAS <DEVICE NAME>."
PT	"DESLIGUE AS <DEVICE NAME>" "APAGUE AS <DEVICE NAME>" "LIGUE O <DEVICE NAME>"
FR	"ALLUME L'<DEVICE NAME>." "ÉTEINS LES <DEVICE NAME>."

IT = ITALIAN, JP = JAPANESE, DE = GERMAN, ES = SPANISH, PT = PORTUGUESE, FR = FRENCH
SE = SWEDISH, KR = KOREAN, NL = DUTCH, EN / US = ENGLISH,

RANGE NAME 1	RANGE NAME 2
EN OPERATING MODE	EN MODE
IT MODALITÀ OPERATIVA	IT MODALITÀ
JP 運転モード (UNTEN MŌDO)	JP モード (MŌDO)
DE BETRIEBSMODUS	DE MODUS
ES MODO DE OPERACIÓN	ES MODO
PT MODO DE OPERAÇÃO	PT MODO
FR MODE DE FONCTIONNEMENT	FR MODE

RANGE NAME 3
EN SETTING
IT IMPOSTAZIONE
JP 設定 (SETTEI)
DE EINSTELLUNG
ES AJUSTE
PT CONFIGURAÇÃO
FR RÉGLAGE

KEYWORD: LOW	KEYWORD: MEDIUM	KEYWORD: HIGH	KEYWORD: AUTO
EN LOW	EN MEDIUM	EN HIGH	EN AUTO
IT LOW	IT MEDIUM / MEDIO	IT HIGH / ALTO	IT AUTO / AUTOMATICO
JP 低い (HIKUI) / LOW	JP 中 (CHŪ) / MEDIUM	JP 高い (TAKAI) / HIGH	JP 自動 (JIDŌ) / AUTO
DE LOW / NIEDRIG	DE MEDIUM / MITTEL	DE HIGH / HOCH	DE AUTO
ES LOW	ES MEDIUM / MEDIO	ES HIGH / ALTO	ES AUTO / AUTOMÁTICO
PT LOW / BAIXO	PT MEDIUM / MÉDIO	PT HIGH / ALTO	PT AUTO / AUTOMÁTICO
FR LOW / BAS	FR MEDIUM / MOYEN	FR HIGH / HAUT	FR AUTO / AUTOMATIQUE

H700 SMART

THE CHOICE OF LANGUAGE IS LIMITED AND DIFFERS BETWEEN ALEXA AND GOOGLE. ALL VOICE COMMANDS LISTED ARE EXAMPLES. SIMILAR, SLIGHTLY MODIFIED SENTENCES MAY ALSO WORK.



GOOGLE
ASSISTANT



OPERATING MODE

EN "OK GOOGLE, SET THE <DEVICE NAME> TO LOW"
 "OK GOOGLE, SET THE <DEVICE NAME> TO HIGH"

IT = ITALIAN, JP = JAPANESE, DE = GERMAN, ES = SPANISH, PT = PORTUGUESE, FR = FRENCH
 SE = SWEDISH, KR = KOREAN, NL = DUTCH, EN / US = ENGLISH,



POWER SWITCH / ON OFF

EN "OK GOOGLE, TURN ON <DEVICE NAME>."
US "OK GOOGLE, TURN OFF <DEVICE NAME>."

IT "ACCENDIMI <DEVICE NAME>"
 "HO SPENTO <DEVICE NAME> ?"
 "HO LASCIATO <DEVICE NAME> ACCESSO?"
 "SPEGNI <DEVICE NAME>"

JP "<DEVICE NAME> はついてる"
 "<DEVICE NAME> で何がオンになっていますか"
 "<DEVICE NAME> をつけて"
 "<DEVICE NAME> をオフにして"
 "<DEVICE NAME> をオンにして"
 "<DEVICE NAME> を消して"

DE "BITTE <DEVICE NAME> AUS"
 "BITTE <DEVICE NAME> EINSCHALTEN"
 "BITTE <DEVICE NAME> AUSSTELLEN"
 "IST <DEVICE NAME> AN?"
 "<DEVICE NAME> AN"

ES "ENCIENDE <DEVICE NAME>"

PT "ACENDER <DEVICE NAME>"
 "APAGAR <DEVICE NAME>"

FR "TU PEUX ÉTEINDRE <DEVICE NAME> ?"
 "ALLUME <DEVICE NAME>"
 "EST-CE QUE <DEVICE NAME> EST ÉTEINTE"
 "QU'EST-CE QUI EST ALLUMÉ DANS <DEVICE NAME>"
 "ÉTEINS <DEVICE NAME>"

SE "STÄNG AV <DEVICE NAME>"
 "SÄTT PÅ <DEVICE NAME>"
 "VAD ÄR PÅ I <DEVICE NAME>"
 "ÄR <DEVICE NAME> PÅ?"

KR "<DEVICE NAME> 꺼 줘"
 "<DEVICE NAME> 전원 켜"
 "<DEVICE NAME> 켜 줘"
 "<DEVICE NAME> 켜져 있어"
 "<DEVICE NAME> 전원 꺼 줘"
 "<DEVICE NAME> 에 뭐 켜져 있어"

NL "<DEVICE NAME> AANDOEN"
 "DOE <DEVICE NAME> AAN"
 "DOE <DEVICE NAME> UIT"
 "STAAT <DEVICE NAME> AAN"
 "STAAT ER IETS AAN IN <DEVICE NAME>"